


# ROGUE®

## ECHO ROWER

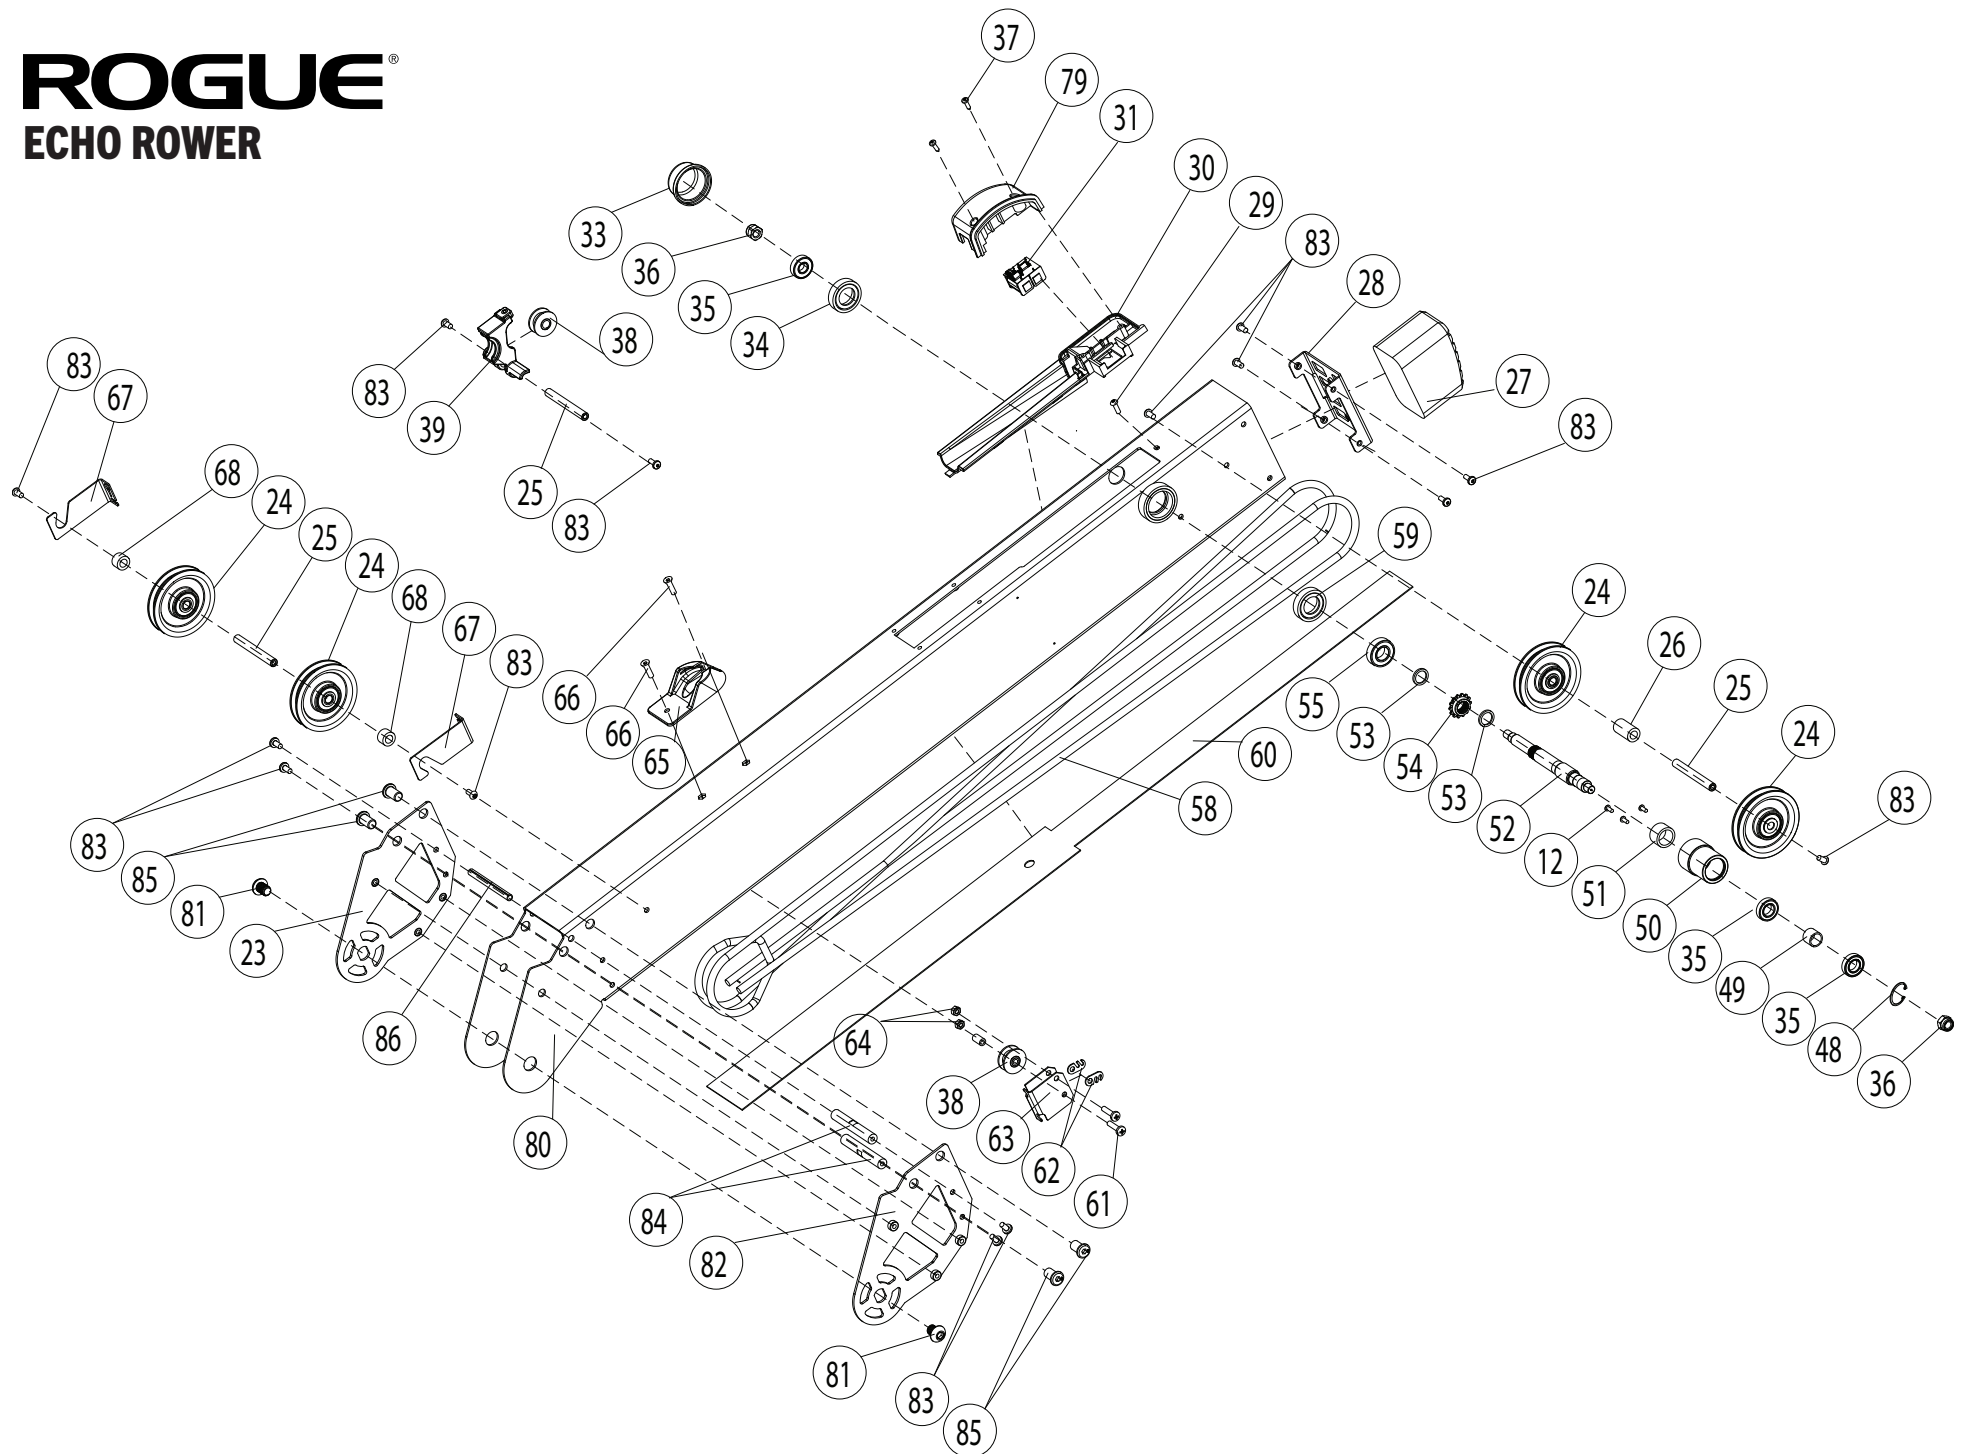

# ROGUE®

## ECHO ROWER

### PARTS LIST

Diagram #	Part#	Description
12	IP0917-12	M4 x 10mm Socket Head Screw
23	IP0917-23	Reinforcement Plate Left
24	IP0917-24	Shock Cord Pulley
25	IP0917-25	Shock Cord Pulley Axle
26	IP0917-26	Shock Cord Pulley Axle Spacer Front
27	IP0917-27	Main Frame End Cap
28	IP0917-28	Main Frame End Cap Bracket
29	IP0917-29	M5 x 16mm Socket Head Screw
30	IP0917-30	Generator Lower Cover
31	IP0917-31	Generator Sensor
33	IP0917-33	Endcap
34	IP0917-34	Bumper
35	IP0917-35	Bearing
36	IP0917-36	3/8-16 Lock Nut
37	IP0917-37	ST4.2 x 19mm Self Tapping Screw
38	IP0917-38	Chain Pulley Small
39	IP0917-39	Chain Stopper
48	IP0917-48	Main Axle Retaining Ring
49	IP0917-49	Main Axle Spacer
50	IP0917-50	Main Axle Bushing
51	IP0917-51	Main Axle Oneway Bearing
52	IP0917-52	Main Axle
53	IP0917-53	Main Axle Protective Ring

Diagram #	Part#	Description
54	IP0917-54	Main Axle Sprocket
55	IP0917-55	Main Axle Bearing
58	IP0917-58	Shock Cord
59	IP0917-59	Bumper 2
60	IP0917-60	Shock Cord Cover
61	IP0917-61	1/4-20 x 30 Torx Head Screw Chain Fixing Plate
62	IP0917-62	Chain Handling Plate
63	IP0917-63	Chain Fixing Plate
64	IP0917-64	1/4-20 Nylock Nut
65	IP0917-65	Handlebar Holder
66	IP0917-66	1/4-20 x 16 Torx Head Screw Handlebar Holder
67	IP0917-67	Shock Cord Hanging Plate
68	IP0917-68	Pulley Axle Spacer Rear
79	IP0917-79	Generator Upper Cover
80	IP0917-80	Main Frame Assembly
81	IP0917-81	Socket Head Screw - Hinge Bushing
82	IP0917-82	Reinforcement Plate Right
83	IP0917-83	1/4-20 x 12mm Torx Head Screw
84	IP0917-84	Threaded Spacer
85	IP0917-85	M12 x 20mm Flat Head Screw
86	IP0917-86	Cylindrical Pin