



How to Adjust the Rogue ECHO SKI Top Cover

Written By: Rogue Product Development




Step 1 — How to Adjust the Rogue ECHO SKI Top Cover



- To adjust the Rogue Echo SKI first position the SKI in an upright position
- Loosen both center line screws located on opposite sides (red arrow). It is not necessary to remove the screws.
- Once loose, twist the top plate to a horizontal position, ensuring the plate rests on top of the main frame of the skier (green arrow).

Step 2

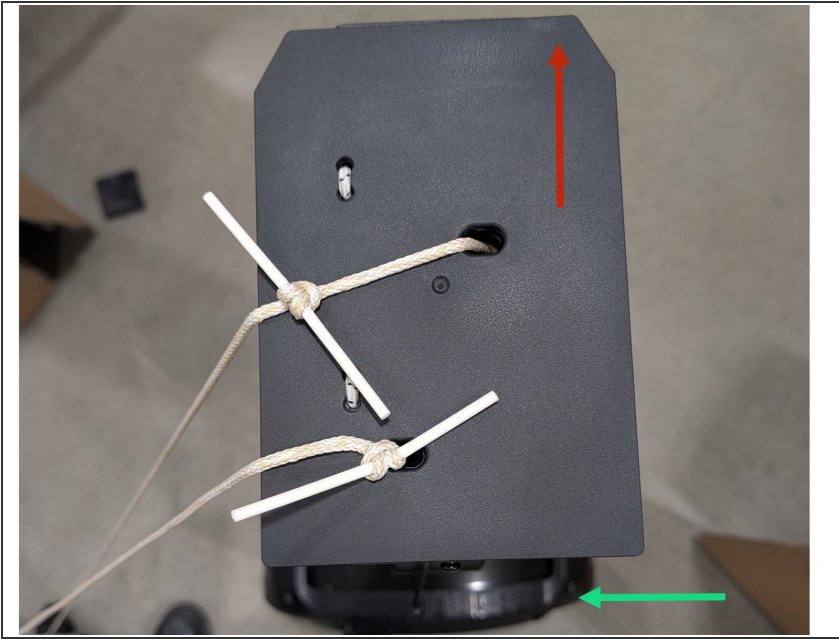

- If the plate is being replaced, ensure the notched end (red arrow) is point towards the rear of the skier. For reference, the green arrow is pointing at the front of the skier.
- Tighten the two centerline screws to secure the plate in place.
- Caution: Do not overtighten the screws. Doing so may cause damage.
- Top plate is now properly installed. You may not continue assembling the skier.