
ROGUE®

# WALL MOUNT SWISS BRACKETS

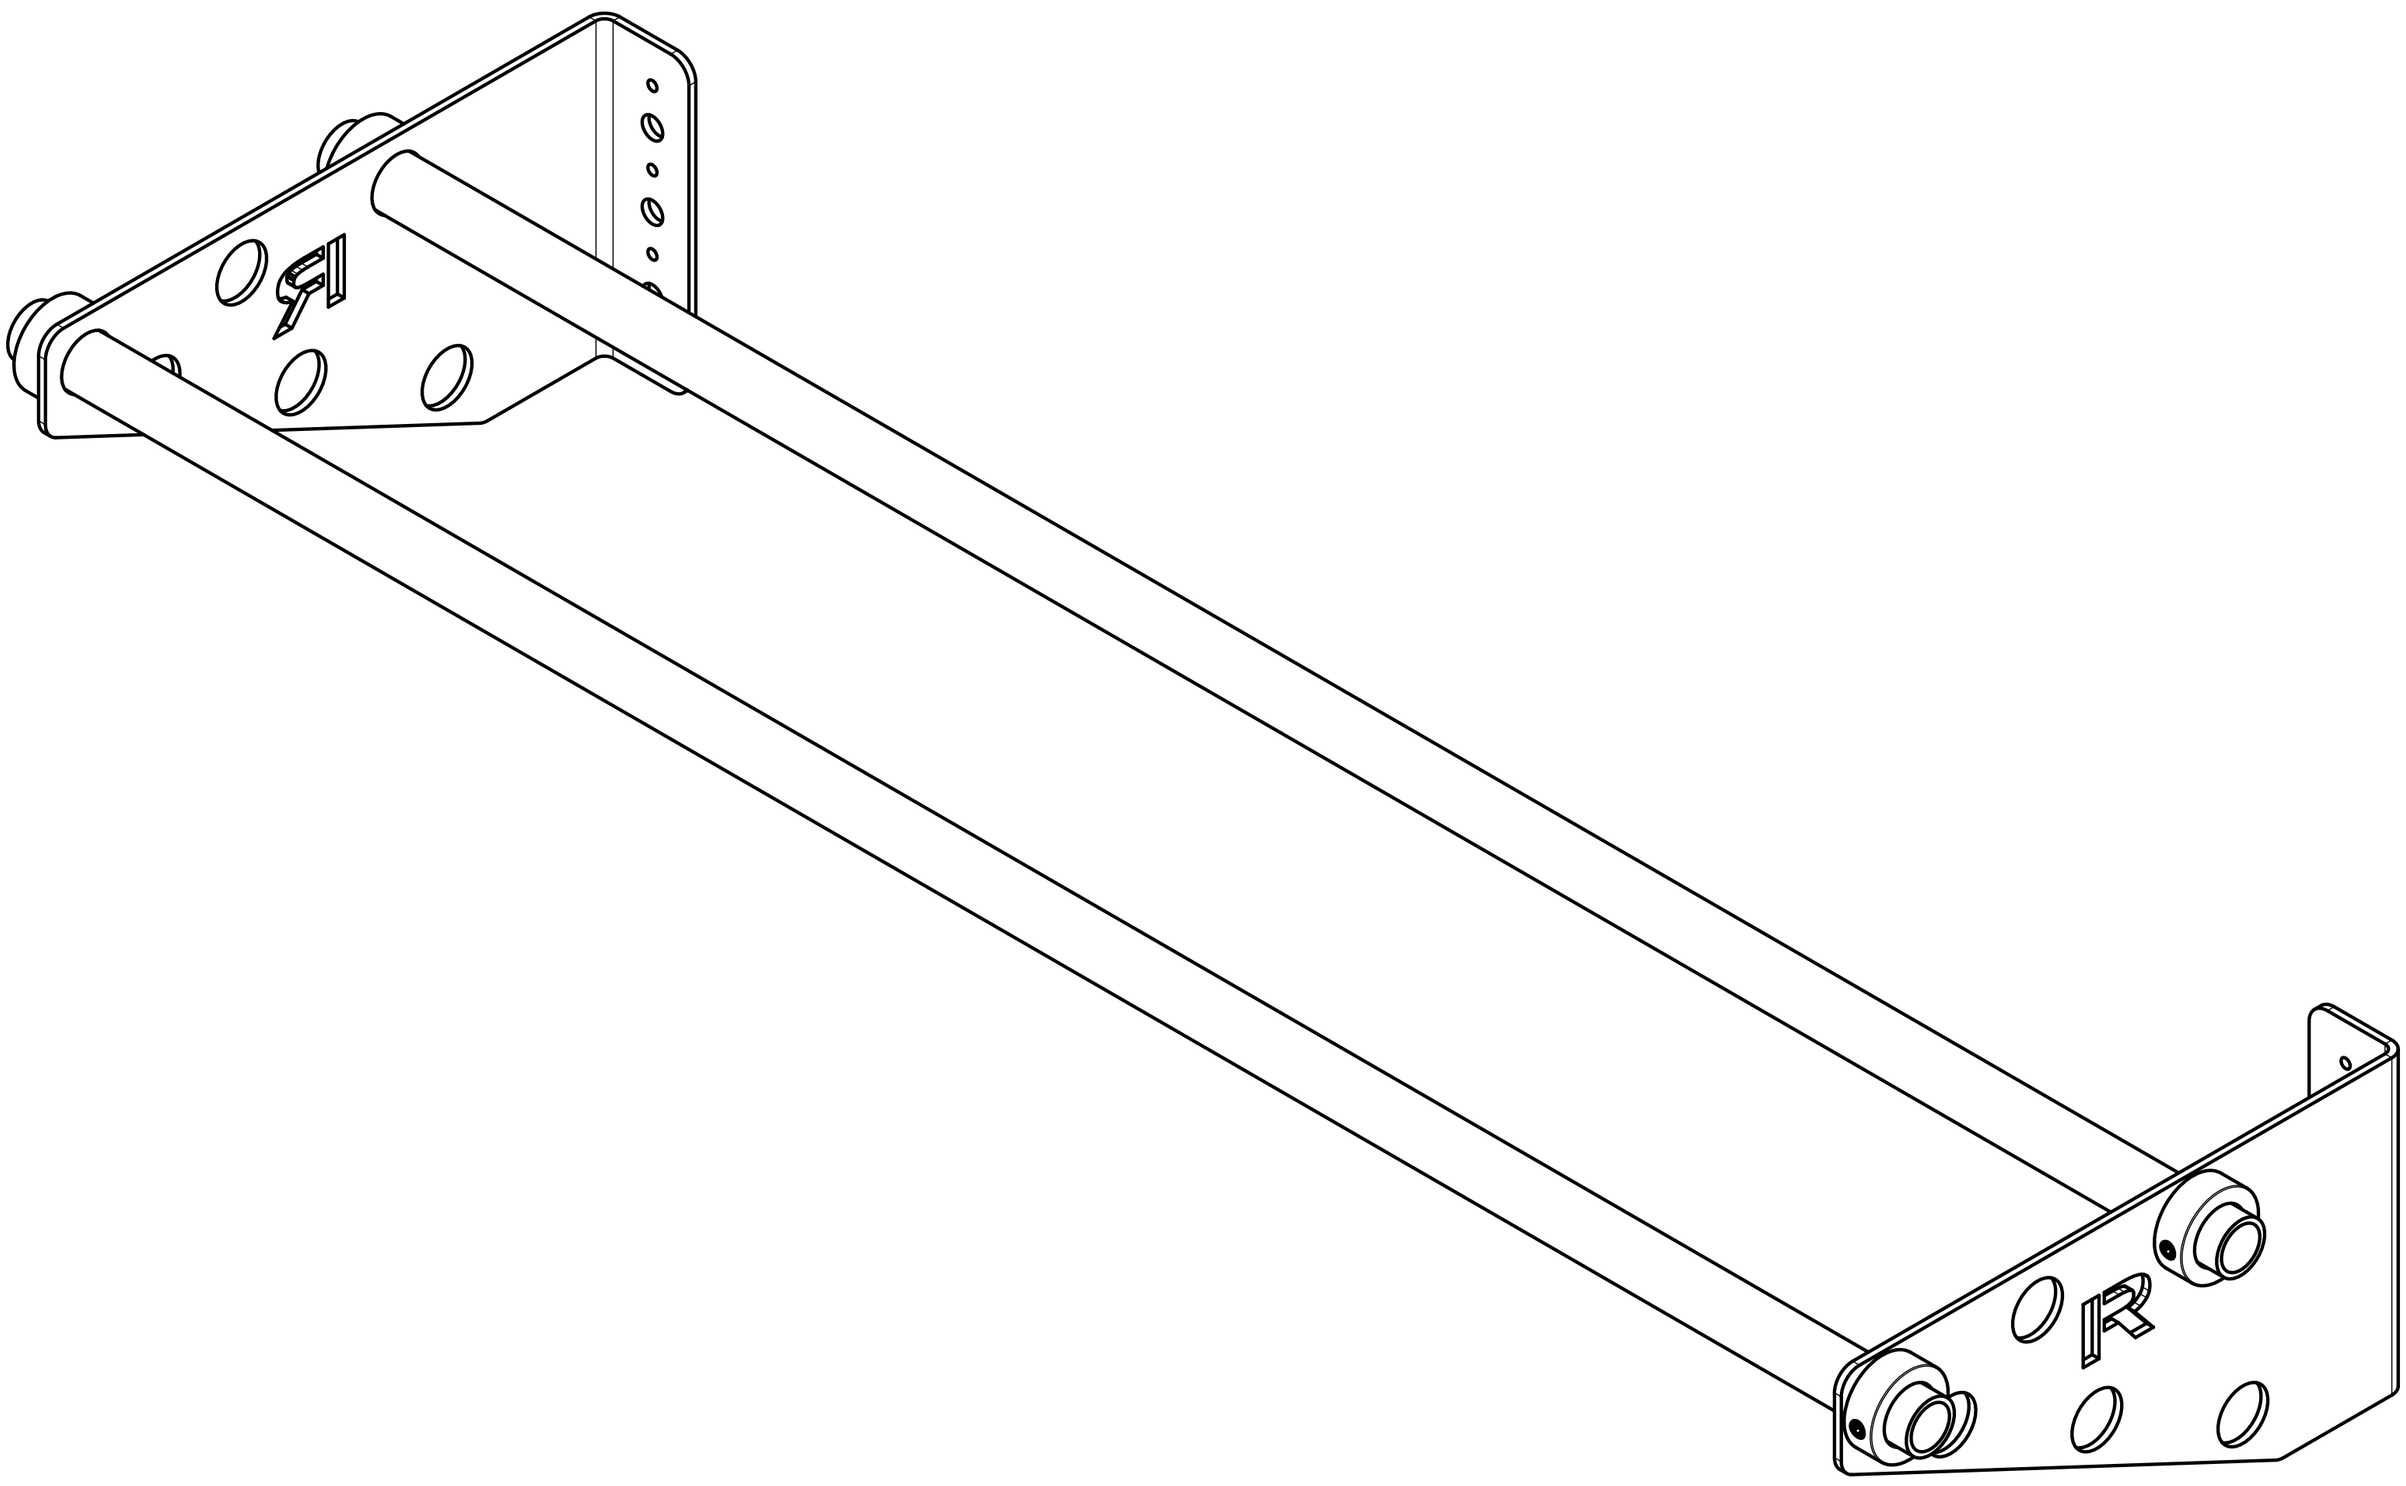


## ⚠ IMPORTANT SAFETY INFORMATION

### DISCLAIMER:

Resistance training, gymnastics training, and activities at height are potentially dangerous and may lead to severe injury or even death. Use common sense when training, obtain instruction in the proper execution of movements, and understand your limitations. This equipment must only be used by competent and responsible persons. Obtaining instruction in appropriate techniques and methods of use is your own responsibility. You assume all risks and responsibilities for all damage, injury or death which may occur during or following incorrect use of this equipment in any matter whatsoever. Rogue Fitness bears no liability beyond the replacement value of the equipment in question.

### WARNING:

**MISUSE OF THIS PRODUCT CAN RESULT IN SEVERE INJURY.**


Both Rogue Fitness and buyer disclaim any express or implied warranty, including, without limitation, warranties or merchantability and/or fitness for a particular purpose with respect to the equipment. Buyer assumes all liability to use of equipment.

Rogue Fitness • 545 E 5th Ave. Columbus, Ohio 43201 • Customer Service: 614-358-6190 • Team@RogueFitness.com

# INCLUDED PARTS


**Note:** Images not shown at scale

**1** Qty: **1x**

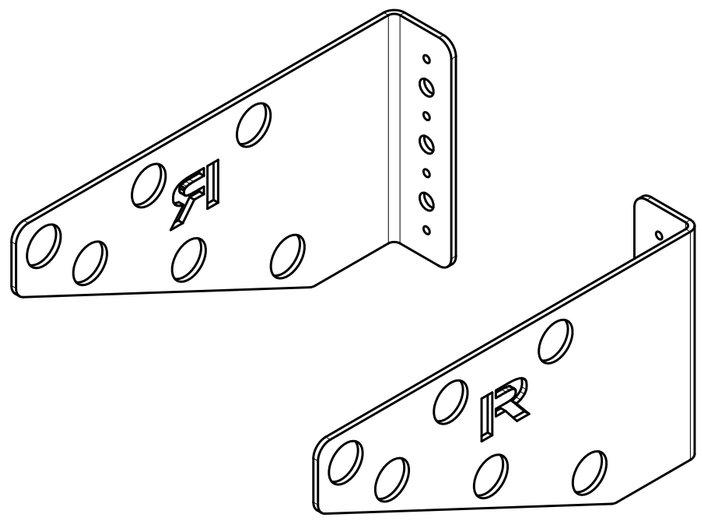

Wall Mount Swiss Bracket Pair


**2** Qty: **4x**

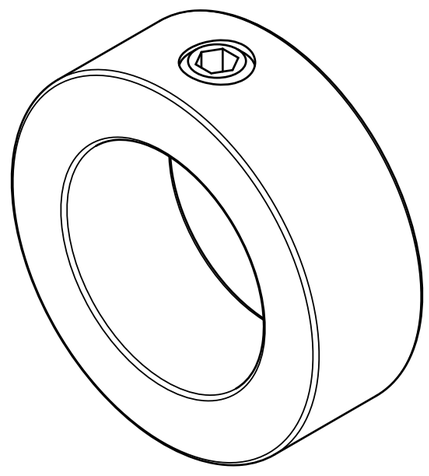

1-3/8” Shaft Collar

**3** Qty: **2x**

*

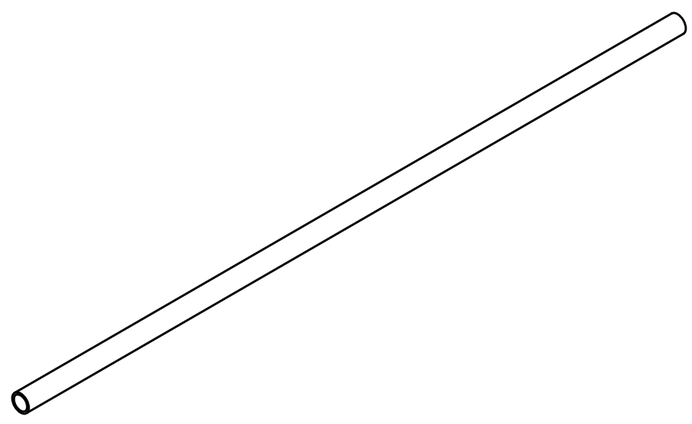

52” Bar

* Only included if selected at checkout.

# STEP 1

- Attach Swiss Mount Brackets to desired location.
- Insert 52” Bar through the Swiss Mount Brackets and secure in place using 1-3/8” Shaft Collars. Ensure that Set Screw is fastened down prior to use.


**NOTES:**

- If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. It is the buyers responsibility to install the swiss mount brackets in a location and with hardware capable of supporting the aggregate weight of the unit and all gear mounted or stored on it.
- It is **never** recommended to install the swiss mount brackets on a drywall, wood or metal stud wall without a stringer or additional support.
- Test unit for stability before each use.

**Anchor swiss mount brackets to wood, solid concrete or metal wall as follows:**

- Wood: 3/8” Lag Screws. Make sure lag screws are secure in wall studs.
- Solid concrete: 3/8” x 3.5” Concrete Anchors.
- Metal Stud or Block Wall: Contact a general contractor.
- **ANCHORING/MOUNTING HARDWARE NOT INCLUDED.**

**1-A**

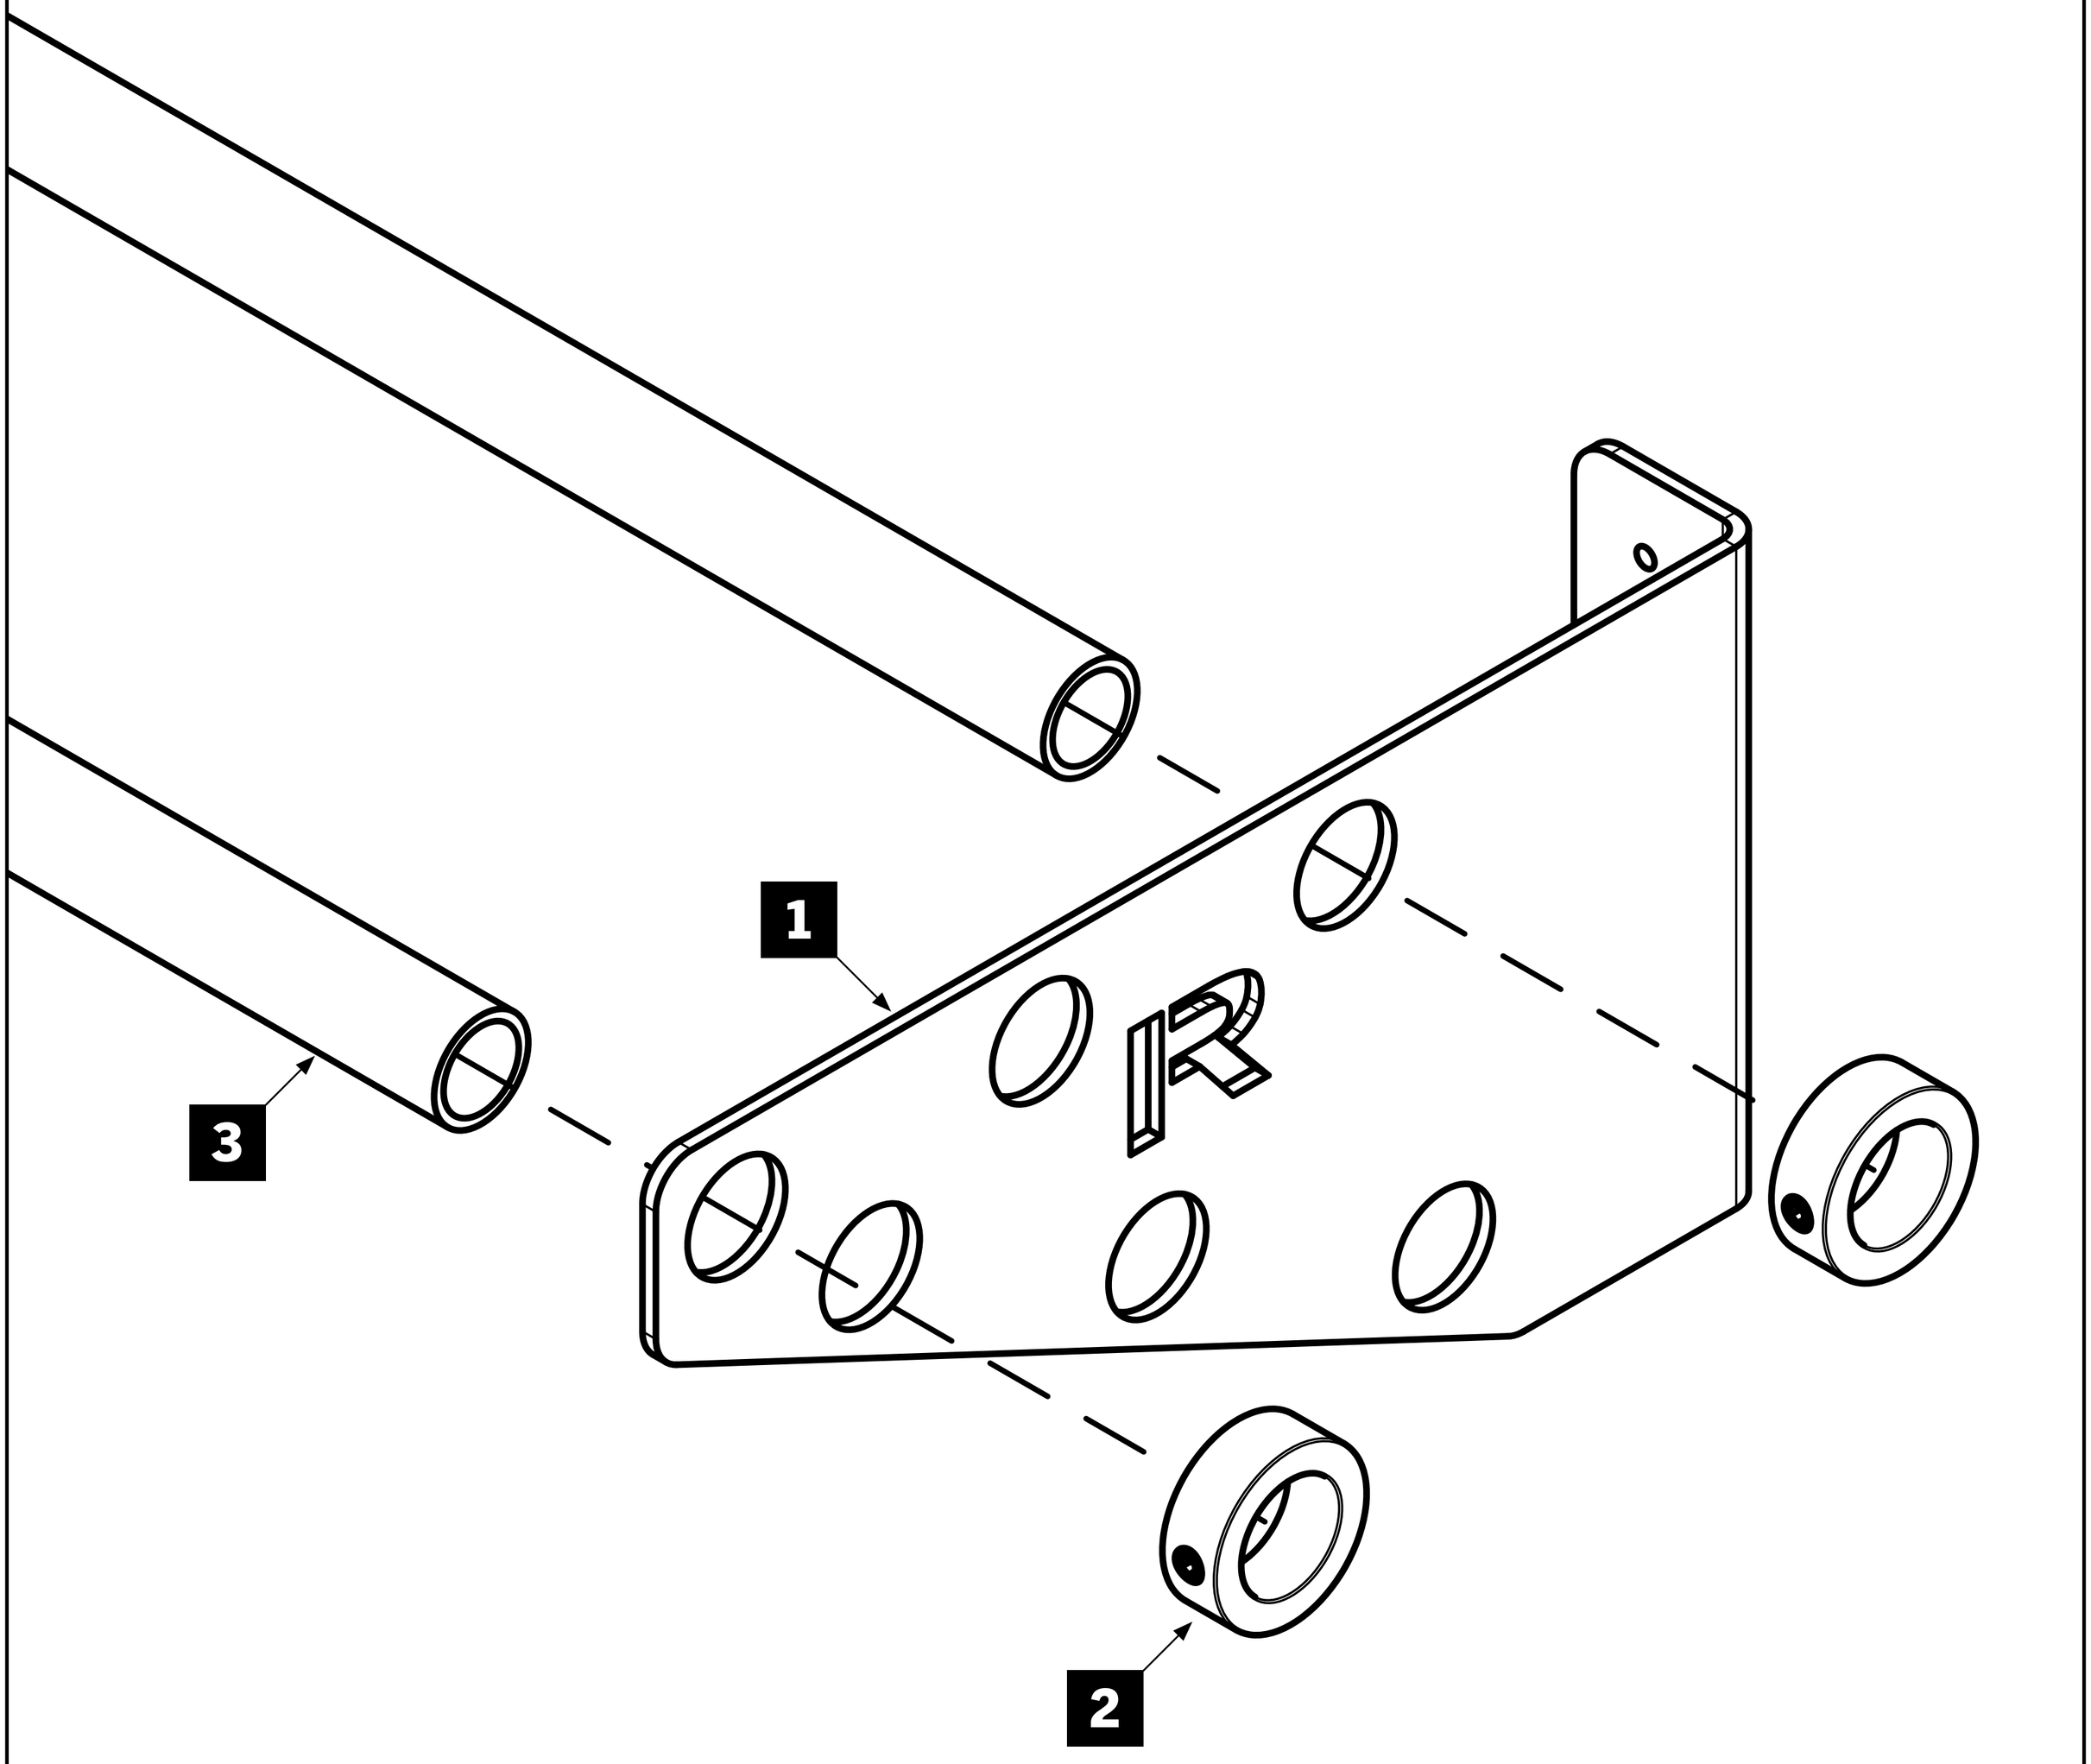

ROGUE

SCAN FOR INSTRUCTIONS

IRON GAME PROGRAMMING

ISO199-2