


ROGUE®

ECHO SKI FLOOR STAND

ASSEMBLY GUIDE

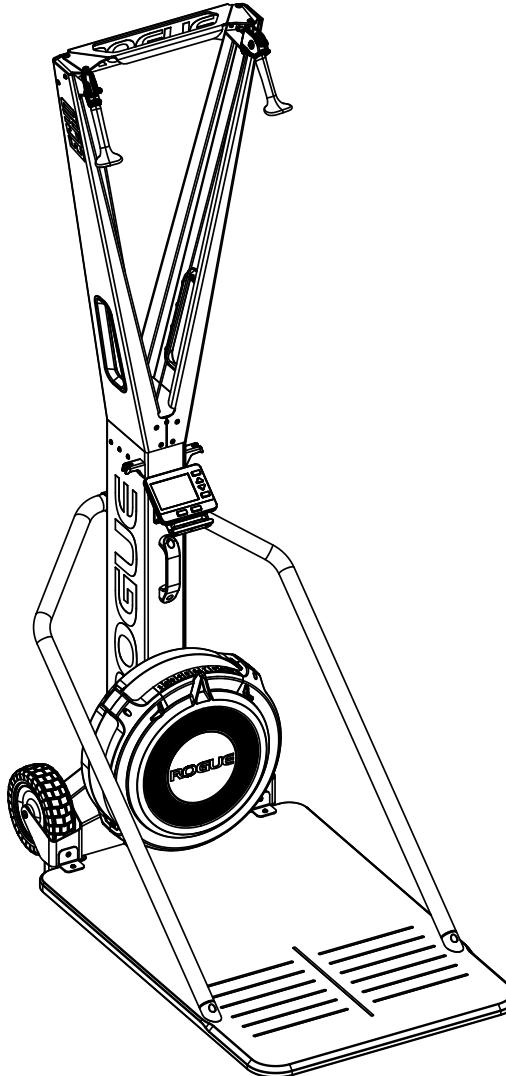


IMPORTANT SAFETY INFORMATION

WARNING:

MISUSE OF THIS CAN RESULT IN SEVERE INJURY.

Both Rogue Fitness and buyer disclaim any express or implied warranty, including, without limitation, warranties or merchantability and/or fitness for a particular purpose with respect to the equipment. Buyer assumes all liability to use of equipment.


PARTS AND TOOLS USED

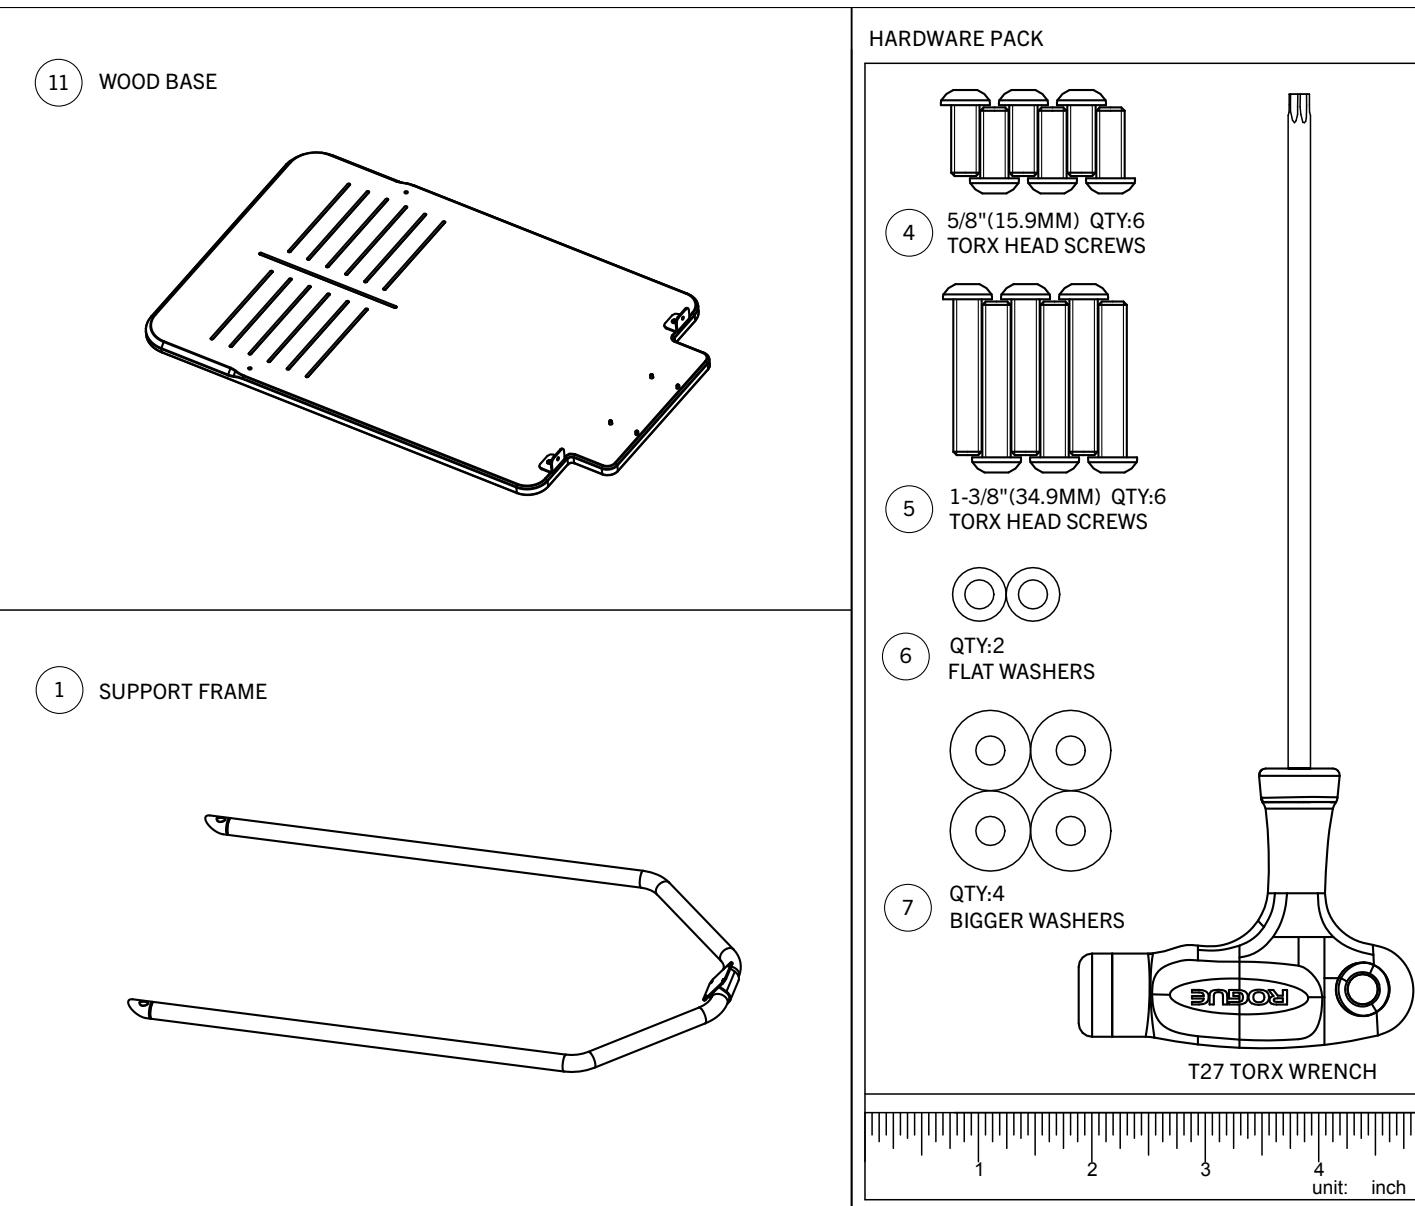

NOTE: ASSEMBLY OF THE ECHO SKI IS REQUIRED PRIOR TO ATTACHING THE FLOOR STAND. ONCE ASSEMBLED PROCEED TO STEP 1.


STEP 1

- ATTACH THE WOOD BASE (PART 11) TO THE ECHO SKI USING TWO 5/8" TORX HEAD SCREWS (PART 4) THROUGH THE CONNECTING L PLATES TO THE WHEEL COVERS WITH ONE SCREW ON EACH SIDE.
- ENSURE THE SCREWS ARE ONLY LOOSELY TIGHTENED.

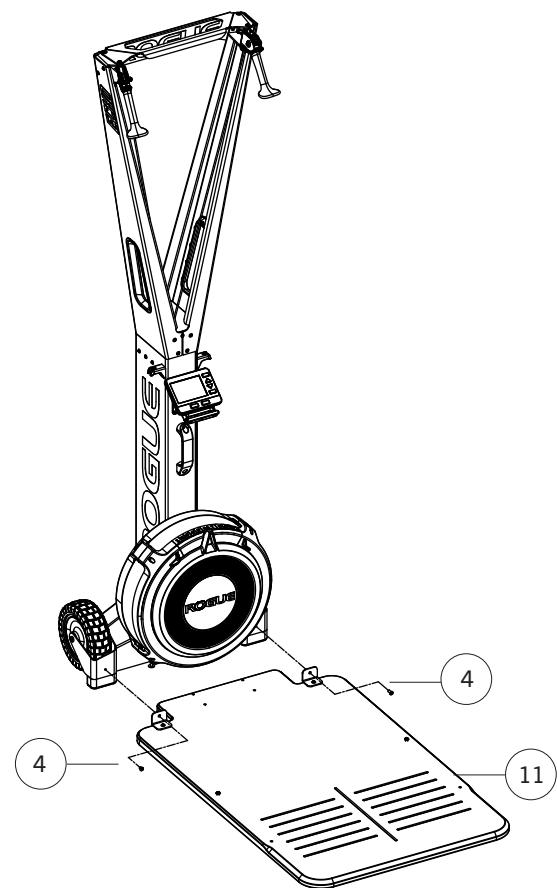


STEP 2

- ATTACH THE BACK SIDE OF THE SUPPORT FRAME (PART 1) ONTO THE ECHO SKI USING FOUR 5/8" TORX HEAD SCREWS (PART 4). BE SURE TO USE THE CENTER OF THE 3 SETS OF HOLES WHEN ATTACHING THE SUPPORT FRAME TO THE SKI. THE TOP AND BOTTOM SETS OF HOLES ARE FOR USE WITH A RACK MOUNT.
- ATTACH THE ARMS OF THE SUPPORT FRAME (PART 1) TO THE WOOD BASE (PART 11) USING TWO 1 3/8" TORX SCREWS (PART 3) AND TWO FLAT WASHERS (PART 6).
- ENSURE THE SCREWS ARE ONLY LOOSELY TIGHTENED.

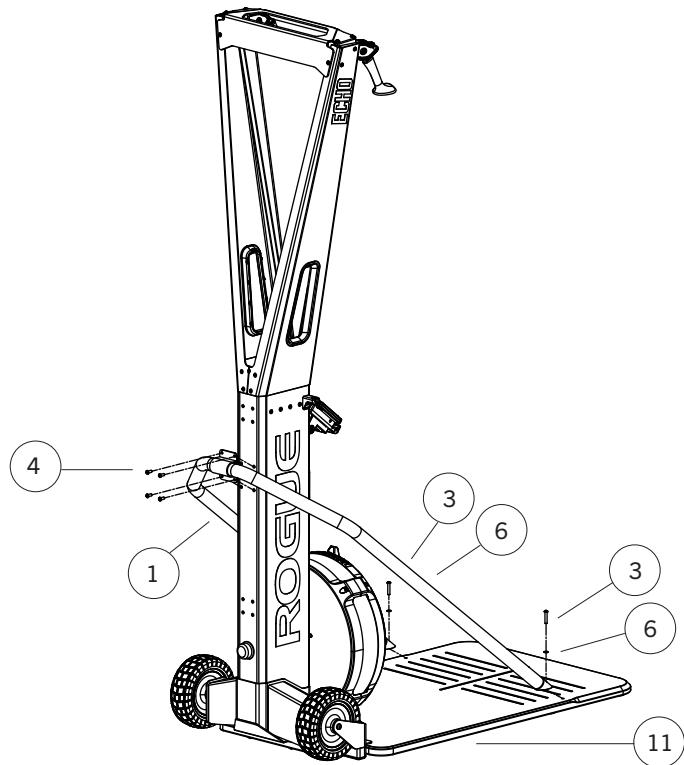

STEP 3

- CAREFULLY LAY THE ECHO SKI ON ITS BACK.
- SECURE THE WOOD BASE (PART 11) TO THE MAIN FRAME OF THE ECHO SKI USING FOUR 1 3/8" TORX HEAD SCREWS (PART 3) AND FOUR BIGGER WASHERS (PART 7).
- ONCE ALL FOUR SCREWS ARE LOCATED FULLY TIGHTEN ALL FOUR SCREWS.

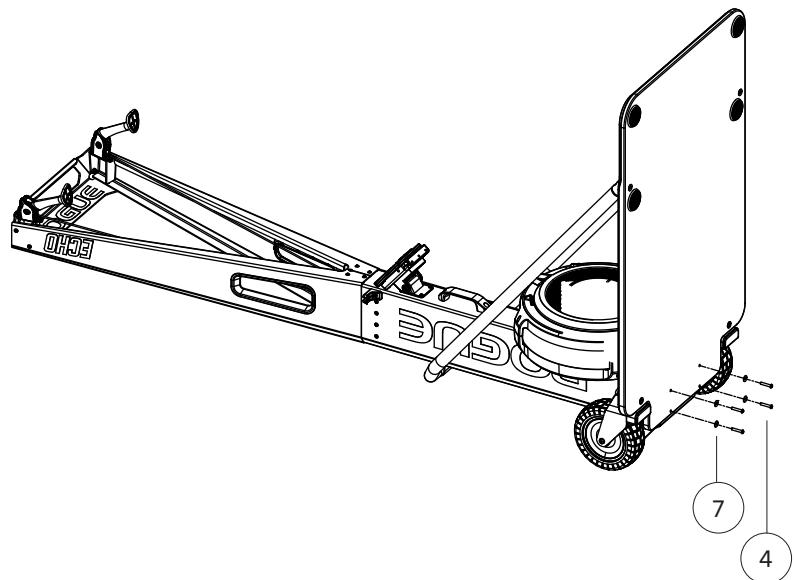

STEP 4

- STAND THE SKI UPRIGHT.
- FULLY TIGHTEN ALL EIGHT SCREWS FROM STEPS 1 AND 2.

ASSEMBLY COMPLETE

- THE ECHO SKI IS NOW FULLY ATTACHED TO THE ECHO SKI FLOOR STAND AND IS READY FOR USE AND/OR STORAGE.

