


# ROGUE®

# ECHO SKI

## ASSEMBLY GUIDE

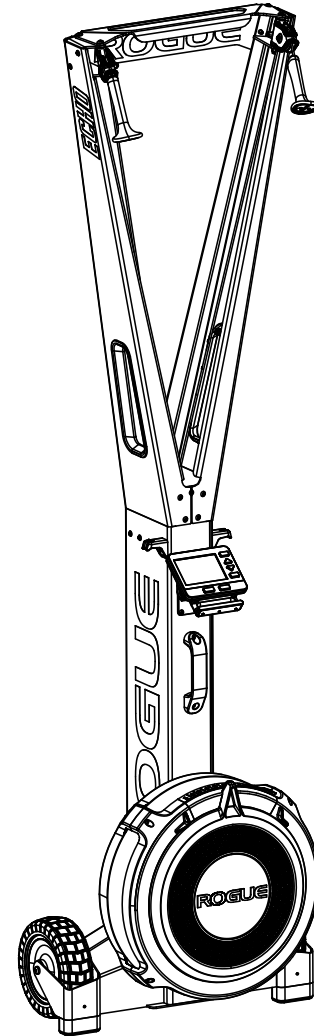

### **IMPORTANT SAFETY INFORMATION**










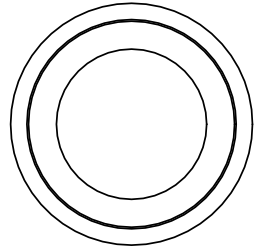

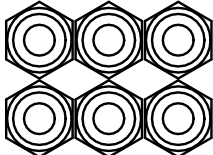
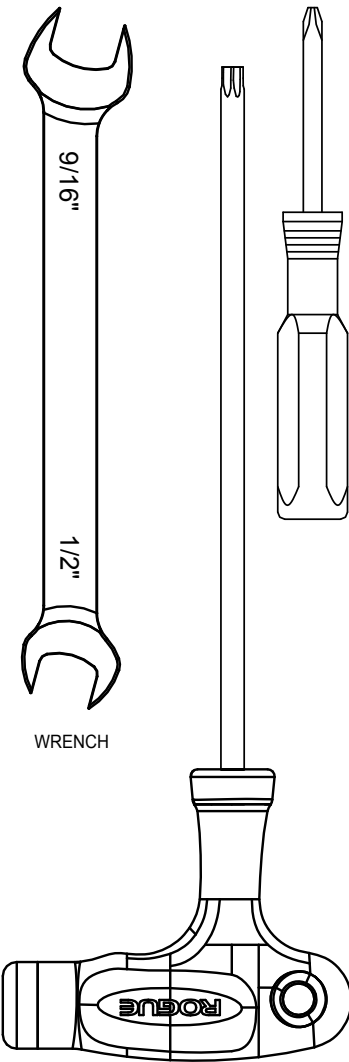
---

#### **WARNING:**

##### **MISUSE OF THIS CAN RESULT IN SEVERE INJURY.**

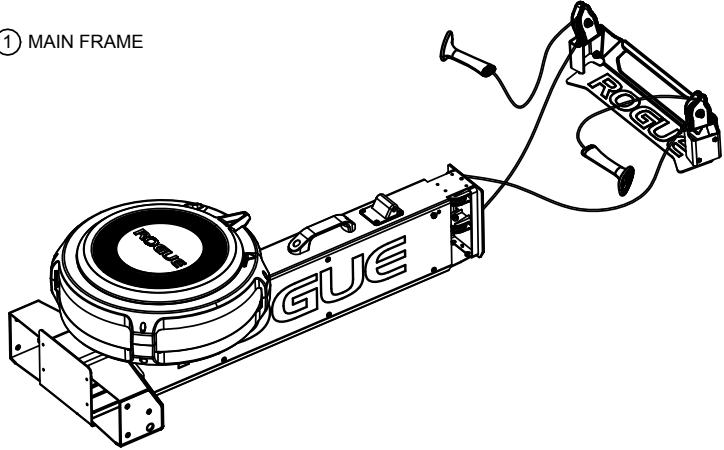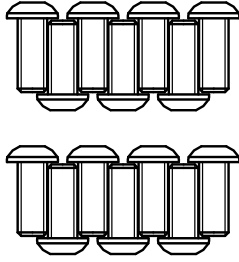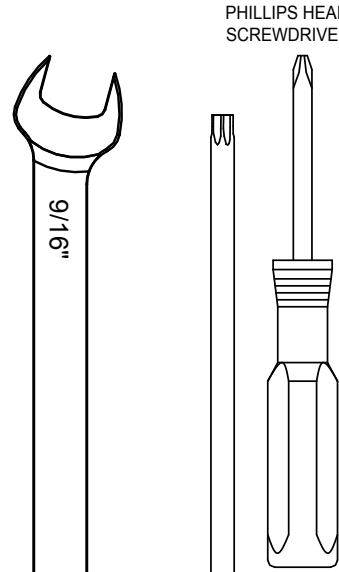
Both Rogue Fitness and buyer disclaim any express or implied warranty, including, without limitation, warranties or merchantability and/or fitness for a particular purpose with respect to the equipment. Buyer assumes all liability to use of equipment.

# PARTS AND TOOLS

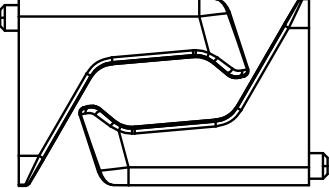 <p>① MAIN FRAME</p>		 <p>②0 5/8" bolts (15.9 MM) QTY:14 TORX HEAD SCREWS</p>		 <p>9/16" 1/2" WRENCH PHILLIPS HEAD SCREWDRIVER</p>	 <p>unit: inch</p>
 <p>③ LEFT ARM</p>	 <p>② RIGHT ARM</p>	 <p>⑦5 LEFT WHEELS</p>	 <p>⑥6 HANDLE HOLDER QTY:2</p>		
		 <p>⑦6 RIGHT WHEELS</p>	 <p>⑥7 END CAP</p>		
		 <p>⑦1 CONSOLE</p>	 <p>④0 3/8"-16 QTY: 6 NYLON NUTS</p>		
				 <p>T27 TORX WRENCH</p>	


## STEP 1

- CAREFULLY LAY THE SKI DOWN ON ITS FRONT, REMOVE THE PROTECTIVE COVER AND PRESS THE END CAP (PART 67) INTO PLACE.

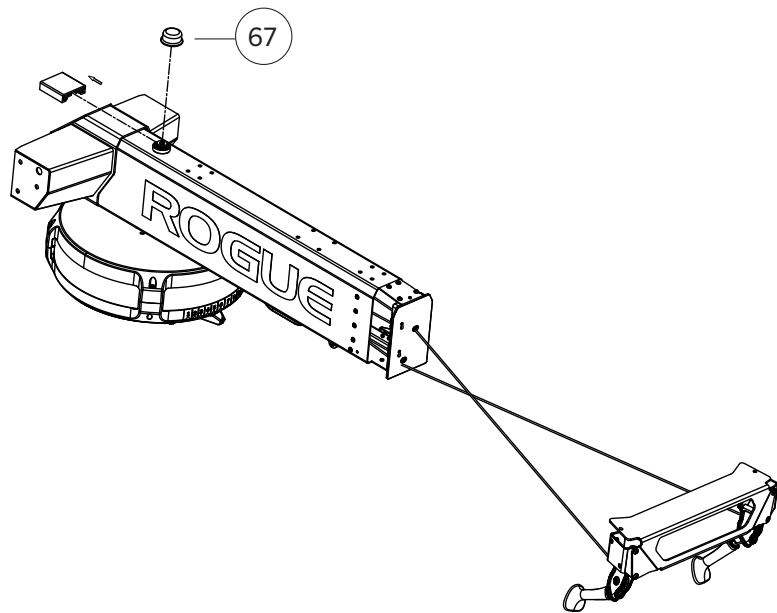


## STEP 2

- TURN THE SKI OVER AND ATTACH THE LEFT (PART 75) AND RIGHT (PART 76) WHEELS USING THREE 3/8" - 16 NYLON NUTS (PART 40) FOR EACH WHEEL USING THE 9/16" END OF THE WRENCH SUPPLIED.
- ENGAGE AND LOOSELY TIGHTEN EACH NUT BEFORE GOING BACK TO ENSURE ALL ARE TIGHT

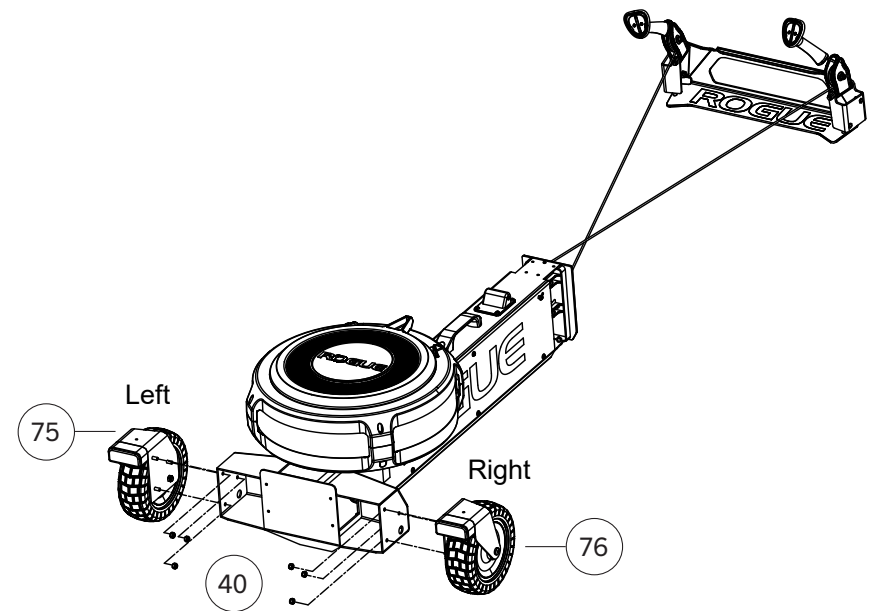

## STEP 3


- ATTACH THE RIGHT ARM (PART 2) AND LEFT ARM (PART 3) TO THE MAIN FRAME (PART 1) USING TWO 5/8" TORX HEAD SCREWS (PART 20) ON EACH ARM.
- ENSURE SCREWS (PART 20) ARE NOT FULLY TIGHTENED UNTIL DIRECTED TO DO SO IN STEP 5. LOOSE SCREWS WILL HELP WITH ALIGNING PARTS AND PREVENT CROSS THREADING.

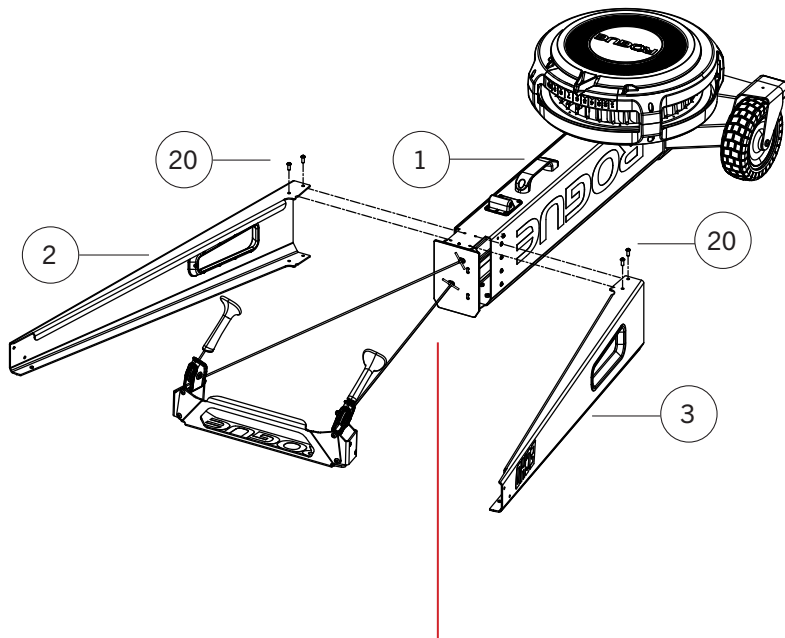

**CAUTION: ENSURE THE CABLES ARE NOT TWISTED TOGETHER. FAILURE TO DO SO MAY DAMAGE THE ECHO SKI.**

## STEP 4


- ATTACH THE END OF EACH ARM TO THE TOP CROSS BRACKET USING FOUR 5/8" TORX HEAD SCREWS (PART 20).
- ENSURE SCREWS (PART 20) ARE NOT FULLY TIGHTENED UNTIL DIRECTED TO DO SO IN STEP 5. LOOSE SCREWS WILL HELP WITH ALIGNING PARTS AND PREVENT CROSS THREADING.

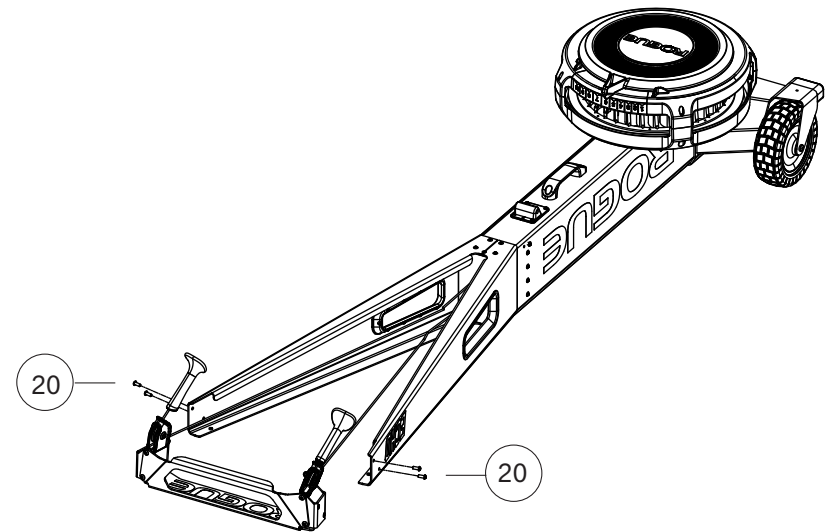

## STEP 5


**CAUTION: WHEN FLIPPING THE SKIER USE THE HANDLE AND THE BASE. DO NOT USE THE ARMS AS THEY ARE NOT FULLY ATTACHED. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE SKIER.**

- CAREFULLY TURN THE ECHO SKI OVER INTO ITS FRONT AND USE TWO 5/8" TORX SCREWS (20) TO SCREW THE ARMS INTO THE END OF THE FRAME. ONE SCREW ON EACH SIDE.
- WITH THE SKI IN THIS POSITION, USE FOUR 5/8" TORX HEAD SCREWS (PART 20) TO SECURE THE BOTTOM OF THE ARMS TO THE REAR OF THE MAIN FRAME AS SHOWN.
- FULLY TIGHTEN ALL 14 - 5/8" TORX HEAD SCREWS (PART 20) FROM STEPS 3 THROUGH 5.

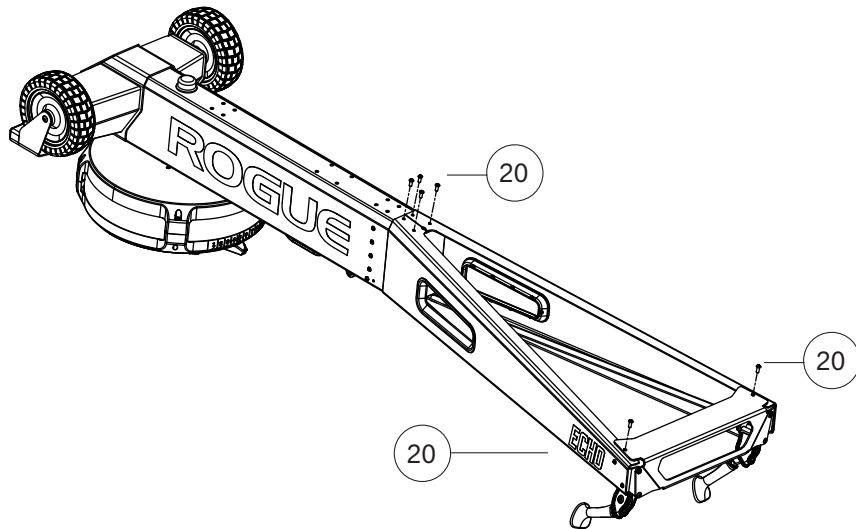

## STEP 6


- REMOVE THE 2 STICKS FROM THE HANDLE CORDS. NOTE: THESE STICKS ARE USED TO KEEP TENSION ON THE CORDS UNTIL THE UNIT IS ASSEMBLED. ONCE ASSEMBLED, THEY ARE NO LONGER NEEDED AND CAN BE DISCARDED

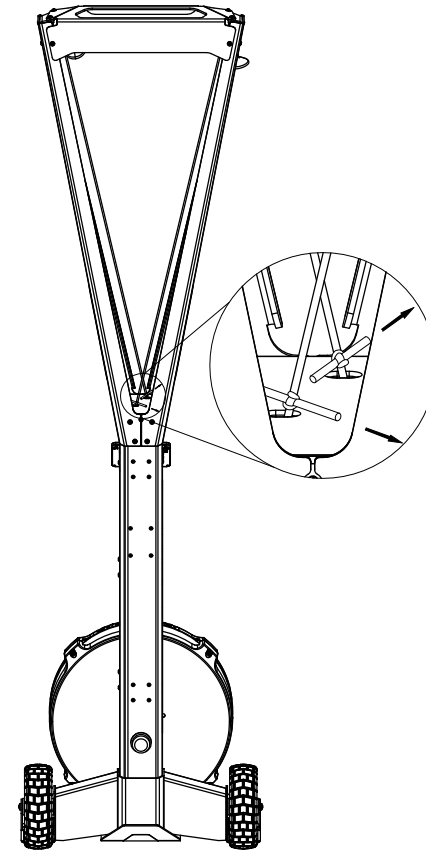


## STEP 7

INSTALL BATTERIES:


- REMOVE THE FOUR SCREWS FROM THE BATTERY COVER WITH THE PHILLIPS HEAD SCREWDRIVER.

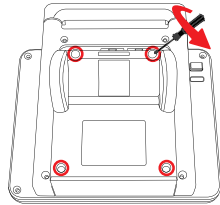

- INSTALL TWO D-CELL (1.5V) BATTERIES. ALIGN POSITIVE AND NEGATIVE ENDS WITH THE CORRESPONDING SYMBOLS.

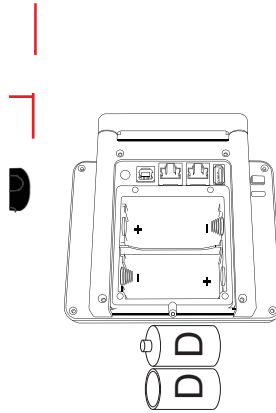


- REPLACE THE BATTERY COVER USING THE FOUR SCREWS TO CLOSE AND SECURE THE BACK OF THE CONSOLE.

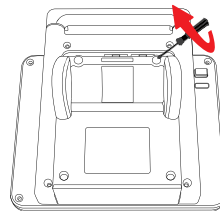

## STEP 8


ATTACH THE CONSOLE (PART 71) TO THE ECHO SKI:

- REMOVE THE SINGLE THROUGH BOLT AND NUT FROM THE REAR OF THE CONSOLE AND ALIGN THE CONSOLE WITH THE MOUNT POINT ON THE ECHO SKI.
- REINSERT THE THROUGH BOLT AND SECURE IT WITH THE T27 TORX WRENCH, TIGHTENING IT UP TO THE POINT WHERE IT HAS ENOUGH FRICTION TO HOLD THE MONITOR UP.
- INSERT THE CONNECTING WIRE INTO THE RIGHT SIDE OF THE CONSOLE.

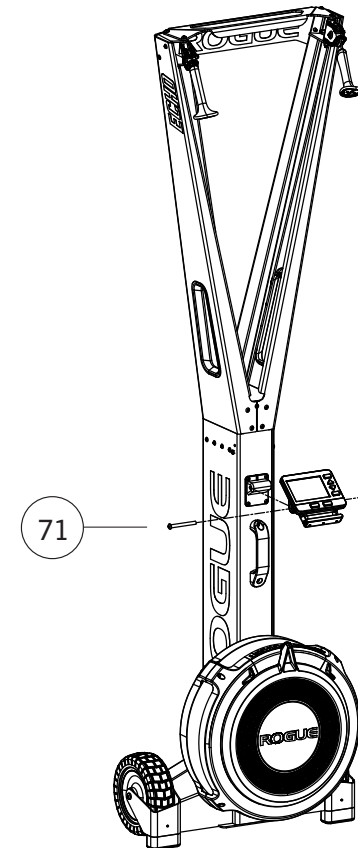

## STEP 9

- REMOVE THE TWO 1/2" TORX SCREWS (22) FROM THE SKI MAIN FRAME. THESE SCREWS ARE THE TWO CLOSEST TO THE CONSOLE.
- USE THESE SCREWS TO ATTACH THE HANDLE HOLDERS (56) TO THE MAIN FRAME AS SHOWN.

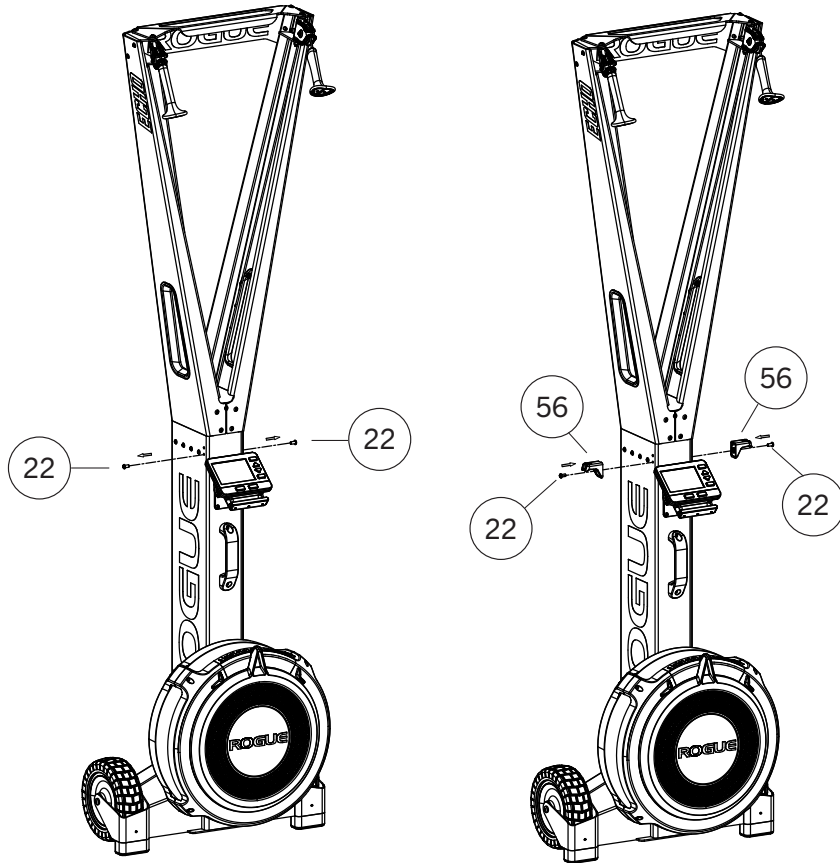

## ASSEMBLY COMPLETE

- THE ECHO SKI IS NOW ASSEMBLED. PRIOR TO USE, IT MUST BE ATTACHED TO THE ECHO SKI FLOOR STAND OR TO THE ROGUE ECHO SKI RACK MOUNT.
- PLEASE REFER TO THE USER GUIDE FOR PROPER EXERCISE FORM, STORAGE, AND MAINTENANCE.
- CONTACT ROGUE CUSTOMER SERVICE WITH QUESTIONS AT 614-358-6190 OR [TEAM@ROGUEFITNESS.COM](mailto:TEAM@ROGUEFITNESS.COM).

